

Version 1.0

User's Manual

# **LWA Portable RFI Monitor**

Frank Schinzel, Ylva Pihlström, Joe Craig, and Ted Jaeger

July 24, 2008

# Contents

<b>1</b>	<b>Introduction</b>	<b>3</b>
<b>2</b>	<b>Hardware</b>	<b>3</b>
2.1	Antennas and Baluns . . . . .	4
2.2	Receiver Box . . . . .	6
2.3	Bias-Tee and Power Supply . . . . .	8
2.4	Spectrum Analyzer and GPIB interface . . . . .	9
2.5	Noise Source . . . . .	10
2.6	GPS Receiver . . . . .	10
2.7	Computer . . . . .	11
2.8	Full Setup . . . . .	11
<b>3</b>	<b>Software</b>	<b>13</b>
3.1	Labview Program . . . . .	13
3.2	System Setup . . . . .	13
3.3	Capture Setup . . . . .	14
3.4	Live Data . . . . .	15
3.5	Statistics . . . . .	15
3.6	FITS Header . . . . .	19
<b>4</b>	<b>Field Setup and Operation</b>	<b>20</b>
4.1	Field Setup . . . . .	20
4.2	Calibration with Noise Source . . . . .	22
4.3	Strong RFI Survey . . . . .	22
4.4	Packing Up . . . . .	22

# 1 Introduction

The LWA portable RFI monitor (LPRM) is a mobile system capable of monitoring and recording a local site's RF signals in a user-specified frequency and time range. The LPRM consists of a Big Blade prototype antenna with active balun, broadband antenna, low-noise pre-amplifier, remotely controlled spectrum analyzer with GPIB port, and a laptop PC running Labview. The frequency coverage is limited by the pre-amplifier to a range 1-1000 MHz, although the type of antenna used limits the effective bandwidth. The equipment has a power load of  $\sim 250$  W and can easily be operated in remote locations using a portable power generator supplying 115VAC.

The data are recorded as time-frequency dynamic spectra and saved in FITS<sup>1</sup> binary table format at user supplied intervals. The table consists of a time axis corresponding to the number of captured spectra and a frequency axis for the spectral bins. The power in each spectral bin is recorded in dB as captured by the spectrum analyzer. The frequency span, resolution per bandwidth and sweep time are user selectable using simple GUI dialog boxes. Instrument and user interfaces are controlled using Labview modular VT's (Virtual Instruments). The LPRM was designed primarily to monitor radio frequency interference (RFI) in the 10-90 MHz band in support of site selection for the Long Wavelength Array. Recently it has been upgraded to provide a larger frequency coverage due to changed requirements.

The LPRM system originally came from the University of Iowa (IPRM; LWA memo 76) and has been re-designed and upgraded on the receiver side to an intermediate second generation system that was capable of recording shorter strong RFI with a single antenna. The latest third generation of the system has the capability to switch between two antennas, thus two different frequency ranges within the same recording. The Labview software has been upgraded for these changes as well.

## 2 Hardware

The third generation LPRM system consists of the following components (Fig. 1):

1. Antennas:

- Big Blade antenna (1-100 MHz)
- Icom discone antenna (100-1000 MHz)

2. Active balun:

For measurements with the Big Blade antenna, the signal passes through an LWDA Telettech/Hicks balun ( $G=+24$  dB,  $IIP3=7.5$  dBm,  $NF=2.7$  dB)

3. Bias-Tee:

The active balun is powered via a Bias-Tee (ZBNT-60-1W, using +9 VDC and 0.32 mA,  $G=-0.2$  dB,  $NF = 0.2$ )

4. RF switch:

A highly isolated switch operating on a single supply voltage selects the channel input (ZX80-DR230+,  $G=-1$ dB,  $IIP3=+55$ dBm)

---

<sup>1</sup>FITS (Flexible Image Transport System) format utilizing the NASA CFITSIO library.

5. LP filter:  
BPL-1200 with a cutoff at 1200 MHz (Gain = -0.1 dB, NF = 0.1)
6. LNA:  
ZFL-1000LN (G=+23.5 dB, IIP3 = -8 dBm, NF=2.9)
7. Noise Source for system calibration:  
Elecraft N-gen wideband noise generator (100 kHz - 500 MHz,  $\pm 3$  dB)
8. Spectrum Analyzer:  
Advantest R3131A
9. USB-GPIB interface
10. Laptop:  
IBM Thinkpad T40 laptop running Windows XP Professional and National Instruments (NI) Labview 8.0
11. Power supply for the LNA and the bias-T:  
Instek GPS-4303
12. GPS Receiver Garmin eTrex Vista HCx
13. Portable generator:  
United Power 7200 W
14. Battery Backup:  
APC UPS XS Series (540W/900VA)

In addition to the components listed above we also have the possibility of including additional attenuators, which is needed for the lower frequency range that has an additional amplifier as compared to the higher frequency range. When used, these attenuators are inserted between the Big Blade antenna terminals and the active balun. The attenuators are SMA fixed coaxial types of +5, +10, and +20 dB respectively, 2 of each (Mini-circuits VAT-5+, VAT-10+, and VAT-20+).

## 2.1 Antennas and Baluns

Currently, there are two sets of antennas employed. The LWA Big Blade prototype antenna, shown in Fig. 2, a cross-dipole antenna with bent dipoles to increase the sky coverage. The antenna blades have a  $50\ \Omega$  input impedance. Details about design and characteristics can be found in LWA Memos #78, #84, and #90. Eventually, the Big Blade is going to be replaced by the actual LWA prototype antenna.

An active balun is attached to the antenna blades using either SMA pig-tails or an adaptor attaching to the input stubs. For strong RFI measurements an LWDA Teletech/Hicks balun (Fig. 3) is used with a gain of 24 dB. The balun is equipped with two separate input/output channels for the two polarizations. In the future this is going to be replaced with a prototype balun (Fig. 3) with a

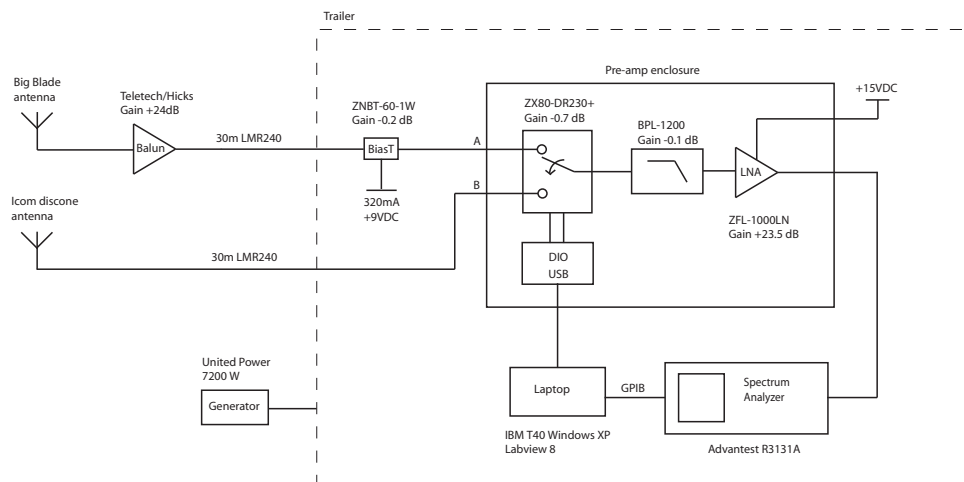


Figure 1: Block diagram of the LPRM/IPRM (version 3). The system can switch between taking data from the Big Blade and the discone antenna.



Figure 2: LWA Big Blade dipole antenna at LWDA site.

gain of  $\sim 28$  dB. Its design is based on the RTA balun described in LWA Memo #120. Currently, the prototype balun is only capable of powering one polarization at a time. Both are powered through the feed cable with DC power. The LWDA balun is to be powered using a set current of 320 mA due to the lack of an integrated voltage regulator. The new prototype baluns have voltage regulators included, thus a supply voltage of 15 VDC should be used.



Figure 3: *Left:* Teletech/Hicks active balun, seen below the faceplate, with blades attached through pig-tails and added attenuators. *Right:* New LWA prototype active balun attached to the blades through adaptor braces.

## 2.2 Receiver Box

The receiver box, shown in Fig. 4 and consists of the Low Noise Amplifier (LNA, Mini-circuits ZFL-1000LN), a low-pass filter BPL-1200 with a cutoff at 1200 MHz, and a RF-switch powered through USB. The Low Noise Amplifier has a gain of 23.5 dB and a noise figure of 2.9 dB over the frequency range 1-1000 MHz. Even considering the poor noise figure of the spectrum analyzer (perhaps 15 dB) the large gain of the LNA ensures that the sensitivity of the LPRM is dominated by the noise temperature of the LNA ( $T_n \sim 250$  K). The low-pass filter with a cutoff of 1200 MHz (Gain = -0.1 dB, NF = 0.1) minimizes aliasing of strong signals over 1000 MHz. The receiver box requires +15 VDC to power the LNA and +5 VDC provided through USB to power the RF switch. The highly isolated switch operating on a single supply voltage selects the channel input (ZX80-DR230+, G=-1dB, IIP3=+55dBm).

The above described parts are housed in a metal box. On its front panel Input and Output Channels are attached through BNC connectors. Two switches control the behavior of the RF switch, one can operate the RF switch in manual mode overwriting any command sent from the PC or operate in PC mode, where the switching control is left to the PC. The green LEDs next to the input connectors indicate which input channel is active. Power is supplied from the back, the +15VDC through the banana plugs and +5 VDC through the USB connector attached to the PC laptop. When the pre-amp is powered the red LED on the back should be illuminated.



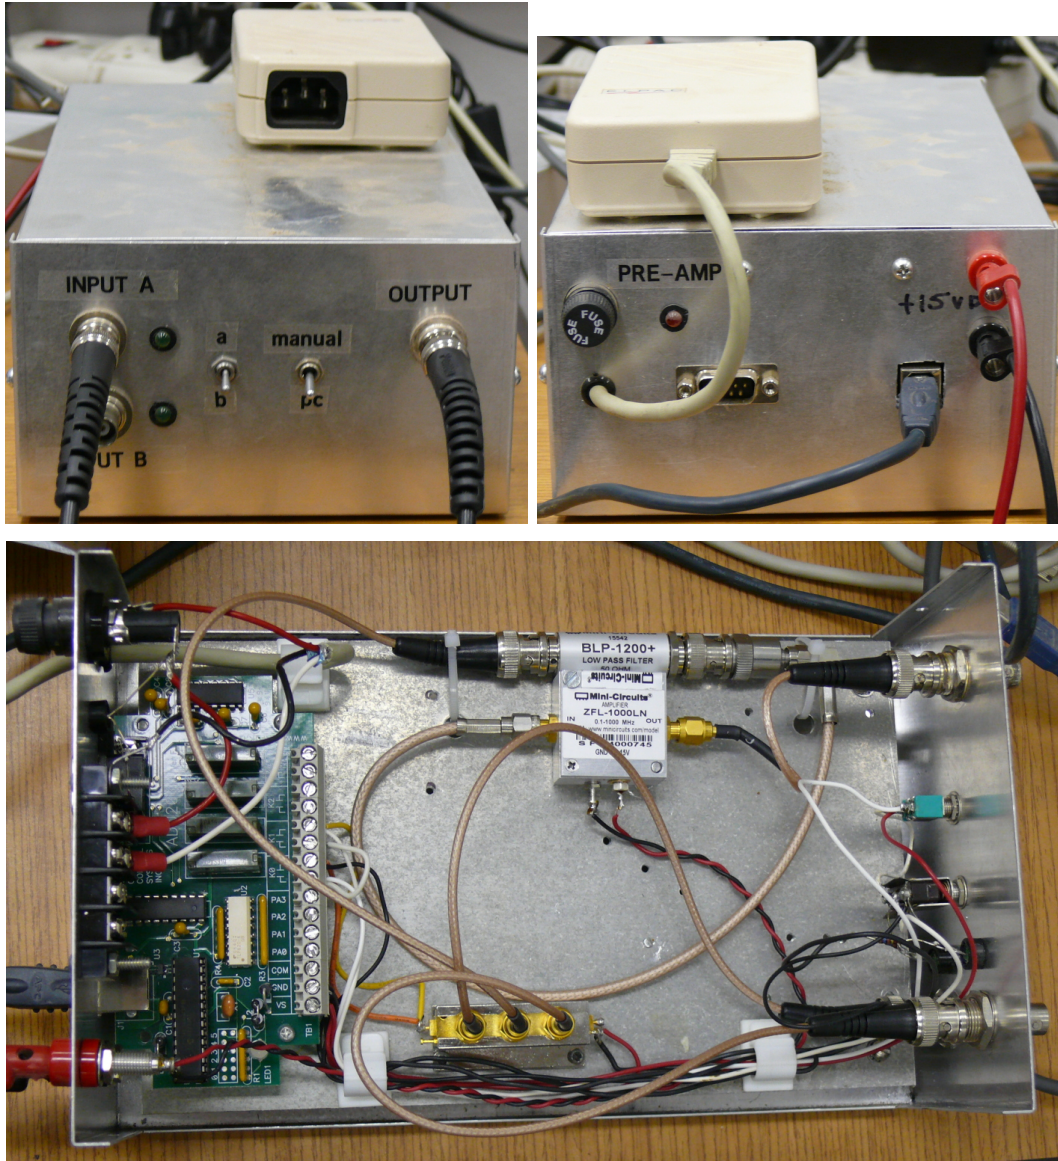


Figure 4: *Upper left:* Front panel of the unpowered receiver box with the two RF Inputs and one RF Output, switches and indicator LEDs. *Upper right:* Back panel of the unpowered receiver box with the power inputs and USB connector. The RS232 connector is not used. *Lower center:* Inside of the receiver box showing the RF switch and controller board, pre-amplifier and low-pass filter.

## 2.3 Bias-Tee and Power Supply

To power the active balun installed at the lower band antenna (e.g. Big Blade) a wideband Bias-Tee is employed. More specific a Mini-Circuits ZNBT-60-1W+ wideband (2.5 - 6000 MHz) Bias-Tee (Fig. 5) with a maximum input loss of 0.3 dB at 50 MHz and 300 mA DC current. Maximum specified DC voltage is 30 V and maximum current is 500 mA.

The DC power to the Bias-Tee and LNA is supplied through a laboratory power supply of the type Instek GPS-4303 200 W (Fig. 5). The power supply has 4 output channels that can be regulated separately or can be combined using parallel/series operation. CH1/CH2 has a setting range of 0-30 V and 0-3 A, CH3 2.2-5.2 V and 1 A Max., CH4 8 - 15 V and 1 A Max.

After turning on the power supply, the power settings can be made without actually supplying the set power. To activate the power outputs, the On/Off push-button labeled for Output needs to be pressed. If done so, the indicator LED should turn green and the Overload indicator LEDs turn off. The displayed values for the individual Channels can be selected with the sliders next to the displays on the left and right side respectively.

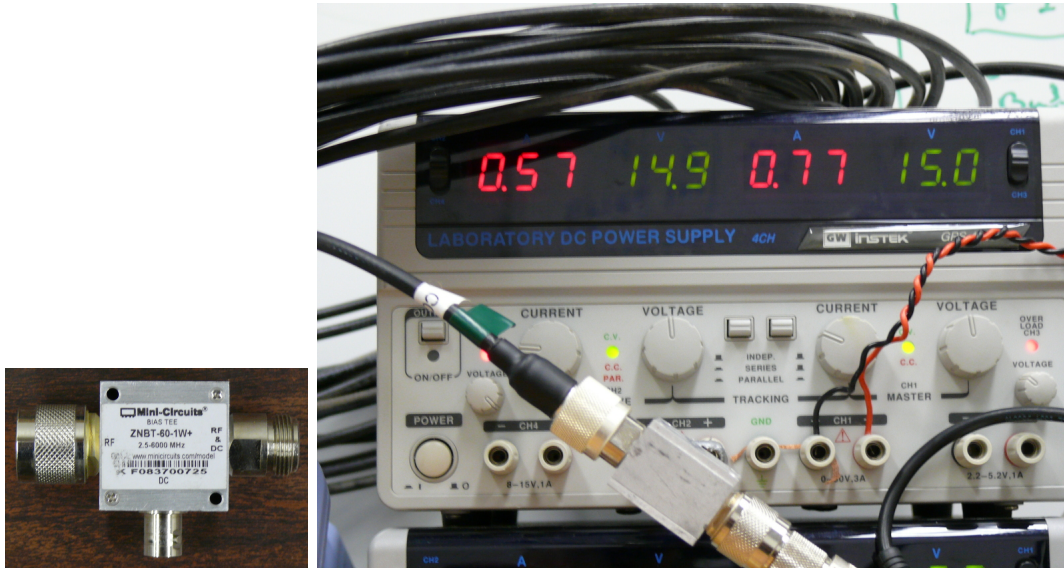


Figure 5: *Left:* Bias-T, Mini-Circuits ZNBT-60-1W+. *Right:* Laboratory power supply INstek GPS-4303 with Bias-T attached to Channel 2.



## 2.4 Spectrum Analyzer and GPIB interface

The spectrum analyzer is an Advantest R3131A (Fig. 6) with a frequency range 9 kHz - 3 GHz. It is controlled by the GPIB-USB interface attached to the GPIB port at the rear of the unit and attached to the Computer via a USB connector. Using the GPIB, all user-controllable features of the spectrum analyzer (e.g. frequency span, resolution) can be set remotely. This is done by using a Labview VI as described in section 3.1 below.

The spectrum analyzer should be calibrated every time it is turned on. This is done pushing "SHIFT" and the blue CAL (or 7) button. Then select 'Cal All' with the button on the right of the screen. A note of caution, if the sweep time is set too short for the resolution bandwidth, then the averaged spectra produce a 'comb' like structure at the edges of each frequency bin.

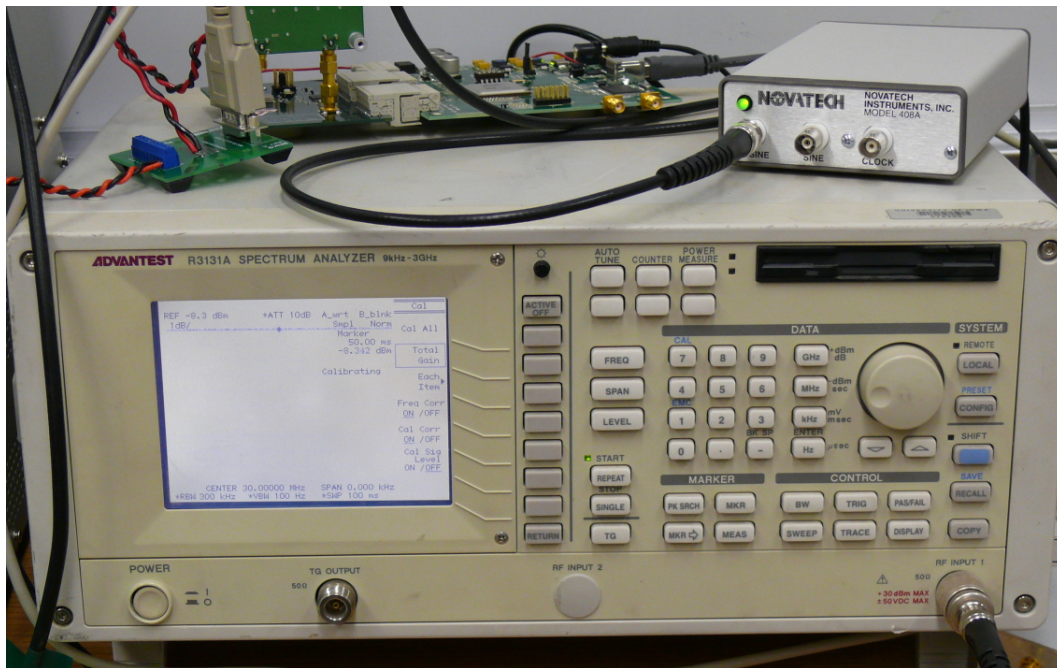


Figure 6: Spectrum Analyzer Advantest R3131A calibrating.

## 2.5 Noise Source

The noise source (Fig. 7) is used to calibrate gain of the system before use. To do so, the noise source is first attached to the input of the spectrum analyzer and about 20 spectra are recorded for the desired frequency range. Then the noise source is attached to the input of the antenna at the far end and another set of spectra is recorded. The actual gain calibration is then done using the post-processing software and the two calibration datasets.

The noise source itself is an Elecraft N-gen wideband noise source with a frequency range of 100 kHz - 500 MHz (within 3 dB). In the field it is powered using a 9V block battery or through an external DC power source between 9V and 15V+DC. The current consumption is about 25 mA. The excess noise output is approximately 35 dB.

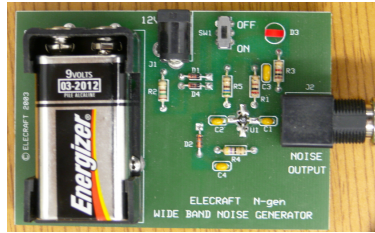


Figure 7: Elecraft N-gen wideband noise source.

## 2.6 GPS Receiver

The GPS receiver is used to record the geographic coordinates, verify the system time and orient the prototype antenna according to its compass. The GPS is a Garmin eTrex Vista HCx (Fig. 8). It can store map and coordinate information on a mini-SD card inside the device. Information obtained from the GPS is written on the Log sheet and put into the according fields in the recording software. The coordinates and time are written in the FITS header of each data sample. The GPS can also be used to navigate to the selected field testing location. The GPS requires two standard AA batteries to operate, which give an approximate operation time of about 36 hours. The GPS unit can be programmed with maps and position data using a standard USB cable.



Figure 8: Garmin etrex Vista HCx GPS unit.

## 2.7 Computer

The computer is an IBM Thinkpad T-40 (Fig. 9) notebook with a 1.5 GHz Pentium M processor, 1.5 GB memory, and 40 GB hard drive. It has two USB 1.1 ports, one of which is used to establish the connection to the spectrum analyzer. The second one is used to power and control the RF switch in the receiver box. The onboard wireless option of the T40 is disabled in the BIOS. Windows XP SP2 is the system operating system. The O/S system time zone is MST/MDT. The operating software is Labview<sup>2</sup> 8.0



Figure 9: IBM Thinkpad T-40 notebook running the Labview VI.

## 2.8 Full Setup

The complete field setup is shown in Fig. 10. The spectrum analyzer and laboratory power supply use a standard electronic power cable as well as the laptop (IBM 19V AC/DC adaptor). Everything besides equipment with its own battery should be connected to the APC UPS XS Series (540W/900VA) which will continue delivering power in case of a power failure. Usually a portable power generator United Power 7200 W provides the required power in the field.

The laptop is connected to the spectrum analyzer using the National Instruments GPIB-USB adaptor as well as to the RF switch controller board through a second USB connection. Usually the setup is installed in the LWA trailer which provides cable feed-throughs to the antennas and for power.

---

<sup>2</sup>Labview<sup>®</sup> is a product of National Instruments.



Figure 10: *Upper left*: Data recording laptop and data reduction laptop. *Upper right*: From top to bottom the spectrum analyzer, power supply and receiver box. *Lower left*: APC UPS XS Series (540W/900VA). *Lower right*: United Power 7200 W portable power generator.

## 3 Software

### 3.1 Labview Program

All LPRM equipment and data collection routines are written using Labview 8.0 virtual instrument (VI) modules. Labview provides some desirable characteristics, such as a modular design, connectivity to various data ports (serial, USB, etc.), remote access over the Internet, as well as compatibility to external functions via dynamic link libraries.

A Labview VI contains three main components:

- A Front Panel which displays all Inputs and Outputs adjustable by the end user.
- A Block Diagram which contains the actual program structure
- Action buttons that control the start, stop or repetition of the virtual instrument.

As a general user of the LPRM system, one only has to deal with the Front Panel and thus should not be concerned with the underlying structure of the VIs.

The main IPRM VI is opened by clicking the “LPRM” shortcut located on the desktop or by opening the file “C:\ LPRM\ main.vi” inside Labview 8.0. (The block diagram for the VI is hidden by default).

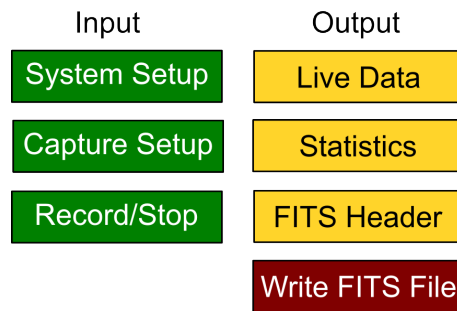


Figure 11: User interface blocks of the Labview recording software.

To execute the LPRM VI, press the START action button indicated by the right arrow icon. The VI should now show the active Front Panel. The LPRM VI contains six tabs which allow varying functionality to the user. Fig. 11 shows the different front panels (tabs) available to the end user. The Input group are the panels that require user input and have to be filled out before the data is recorded. The Output group are the panels that visualize the data that is being recorded and show instantly what information is recorded, before it writes out a FITS file. The “IPRM Main” tab is just a front page and has no functionality. Usage and functions for these individual panels are described in the following sections.

### 3.2 System Setup

The “System Setup” tab, shown in Fig. 12 contains information about the current system settings. It is separated into two groups, “Hardware Settings” and “Observer and Site Information”. In general “Hardware Settings” do not need to be changed. There the Spectrum Analyzer control channel is



selected and the directory where the FITS files are going to be written at is defined. Usually this should be “C:/LPRM/savefiles/”. The “Observer and Site Information” need to be adjusted. The names of the observers need to be entered, the abbreviated site name (e.g. NA, MA), Northern Latitude and Western Longitude coordinates of the site in the format indicated (dd:mm:ss), there is also room for a short note about the site/setup which is going to be stored in the FITS file as well.

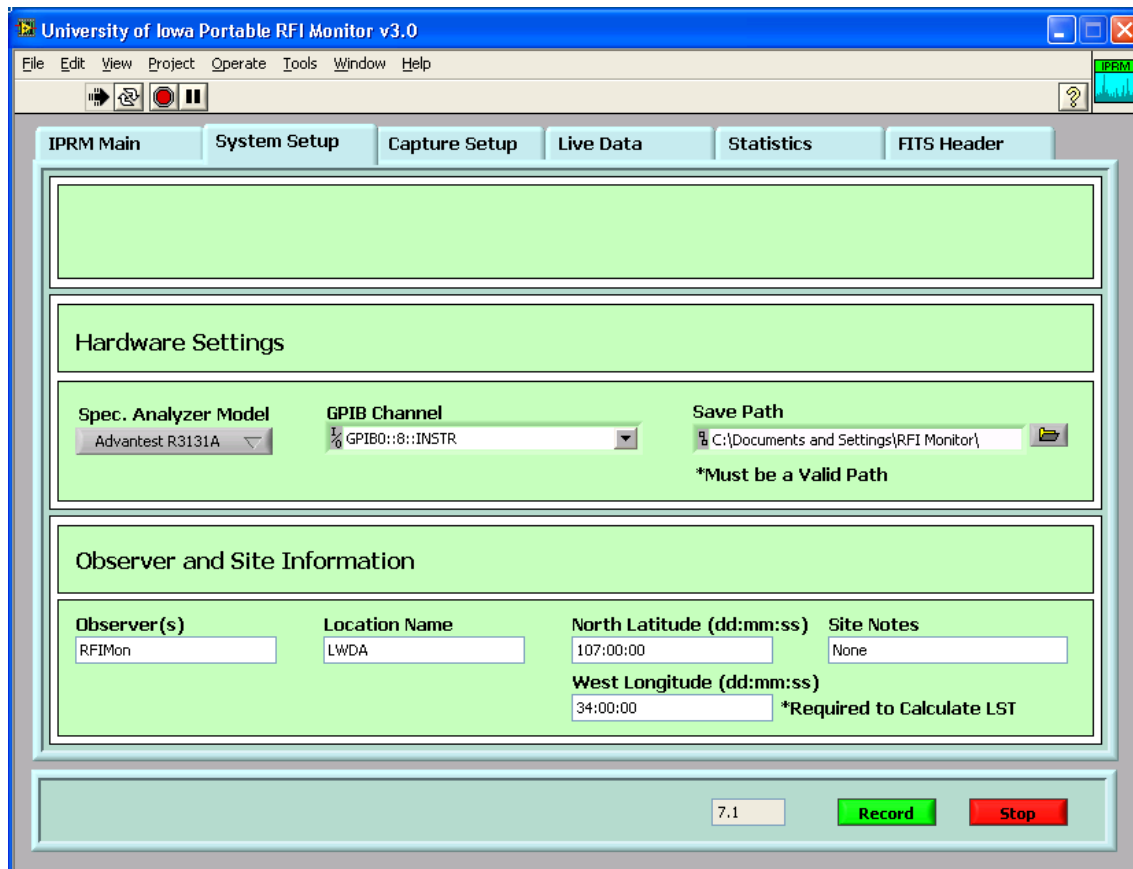


Figure 12: System Setup tab.

### 3.3 Capture Setup

Another input tab is the “Capture Setup” (Fig. 13), here everything about the data recording and settings of the spectrum analyzer is defined. The panel is split in two sections, one for Channel A and one for Channel B corresponding to the Inputs labeled A and B on the receiver box. To switch between Channel A only and Channel A and Channel B modes just use the check-box at the upper right corner indicating whether Channel B is enabled or not. If Channel B is disabled all the Input boxes are grayed out and parameters can not be changed.

The boxes labeled Model are for entering the antenna type, in this example we have the Big Blade 1 antenna in East-West direction, “BB1EW”, on Channel A and a “discone” antenna on Channel B. Then the capture settings are defined for each Channel. Start and Stop frequencies can be either

selected from the drop down menus or by checking the manual check-boxes custom defined. Here for example we have Channel A defined ranging from 1 to 100 MHz and Channel B from 100 to 1000 MHz. The resolution bandwidth (RBW) needs to be defined from the drop-down menus. For the lower frequencies we like to have higher resolutions, thus we usually select 10 kHz, for higher frequencies to speed up things we go to a RBW of 100 kHz. The reference level (REF level) needs to be adjusted according to the maximum power level expected in the spectrum. For the discone antenna -40 dB is a good value, for the Big Blade due to the active balun the level is usually higher around -10 to -20 dB. The dB per DIV value does not need to be changed, the default value is just right. The sweep time is a crucial parameter. For higher RBW a longer sweep time is recommended in order to avoid producing artifacts in the spectrum like 'comb' structures. For 10 kHz RBW a sweep time of 250 ms is adequate, for 100 kHz, 150 ms can be used.

Then the sample intervals (Samp. Int) need to be defined. This specifies after how many spectra new FITS file is written out to the harddrive, a good measure should be every half hour or full hour. The value for sample intervals is based on past experience, because the time per interval can only be estimated. A Samp. Int. of 100, as indicated in the figure, usually corresponds to around 120 minutes of data. The values for "Pre-Amp", "Balun" and "Atten" correspond to the gain of the components used in the individual Channel. These values are written into the FITS file headers for later reference. The "Duty Cycle" of Channel B should always be 1 for our purposes. This number defines how many spectra are being recorded for Channel B per sample interval.

Once all the information is entered and verified the green "Record" button can be pressed and the system starts recording. To stop the data recording there are two methods available. By pressing the red "Stop" button, the system finished the last sample interval and writes out a half completed FITS file, at the moment there is no mean of handling these half written files. The other method is to just press the stop button of the Labview program (red stop sign) close to the run button (right arrow) that has been pressed to start the program. This stops the data recording instantly and all spectra that have not been saved to a file yet are lost.

### 3.4 Live Data

After the data recording process has been started the instantaneous spectrum spectrum can be seen under the "Live Data" tab, Fig. 14. The screen is split in two sections, the top part shows the most recent spectrum recorded, the lower part shows a time footprint of all the plots that have been recorded since the last file writeout. This is also an indicator on the progress and how long it takes until a new FITS file is going to be written out. On the bottom left there are two tabs with which the viewed Channel can be selected.

### 3.5 Statistics

The statistics tab, Fig. 15, shows standard deviation, maximum, mean, median and minimum values of the recorded spectra since the last file writeout. This means that once a new FITS file has been written the statistics window is being reset. When the program is running, there will be a spectrum close to 0 dB which shows the standard deviation, and below follows in order the maximum, the median and the minimum spectra. Like in the "Live Data" tab the showed Channel can be selected from the tabs on the lower left. The values from the statistics are not recorded into the FITS file. The FITS file only contains the individual raw spectra.

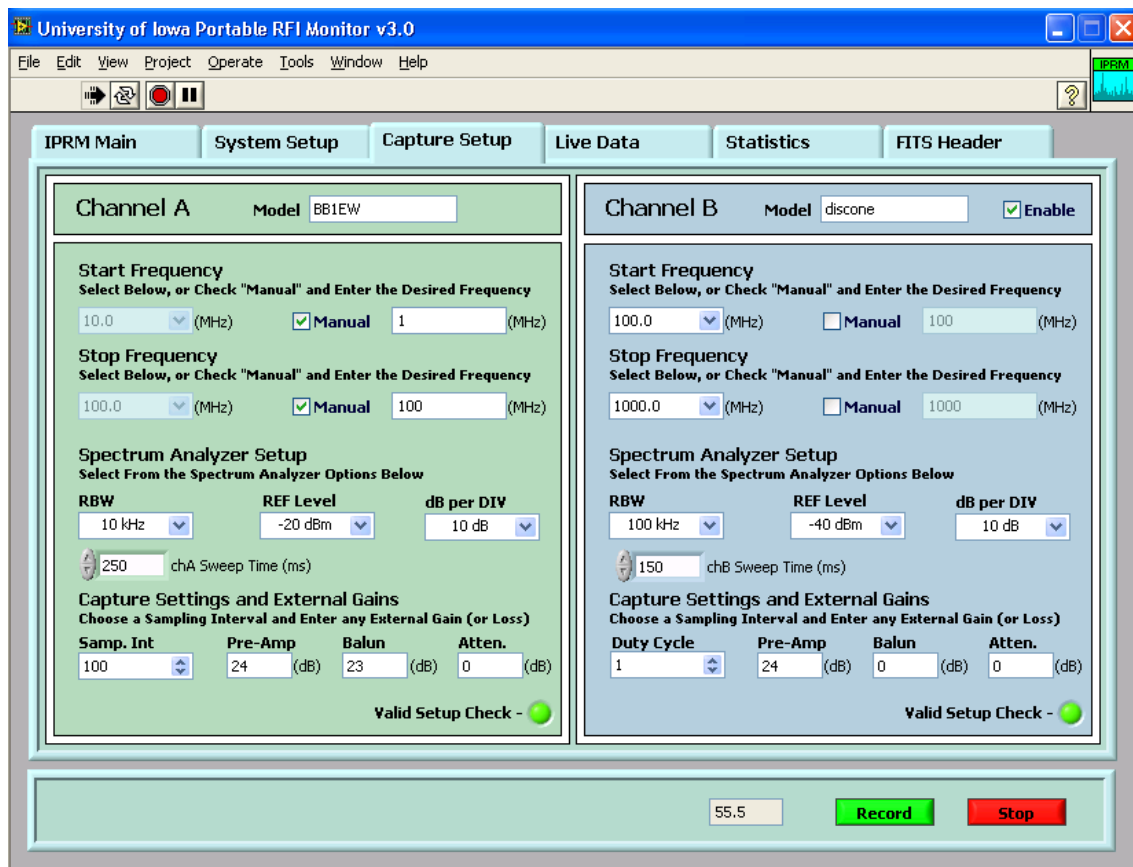


Figure 13: Capture Setup tab.

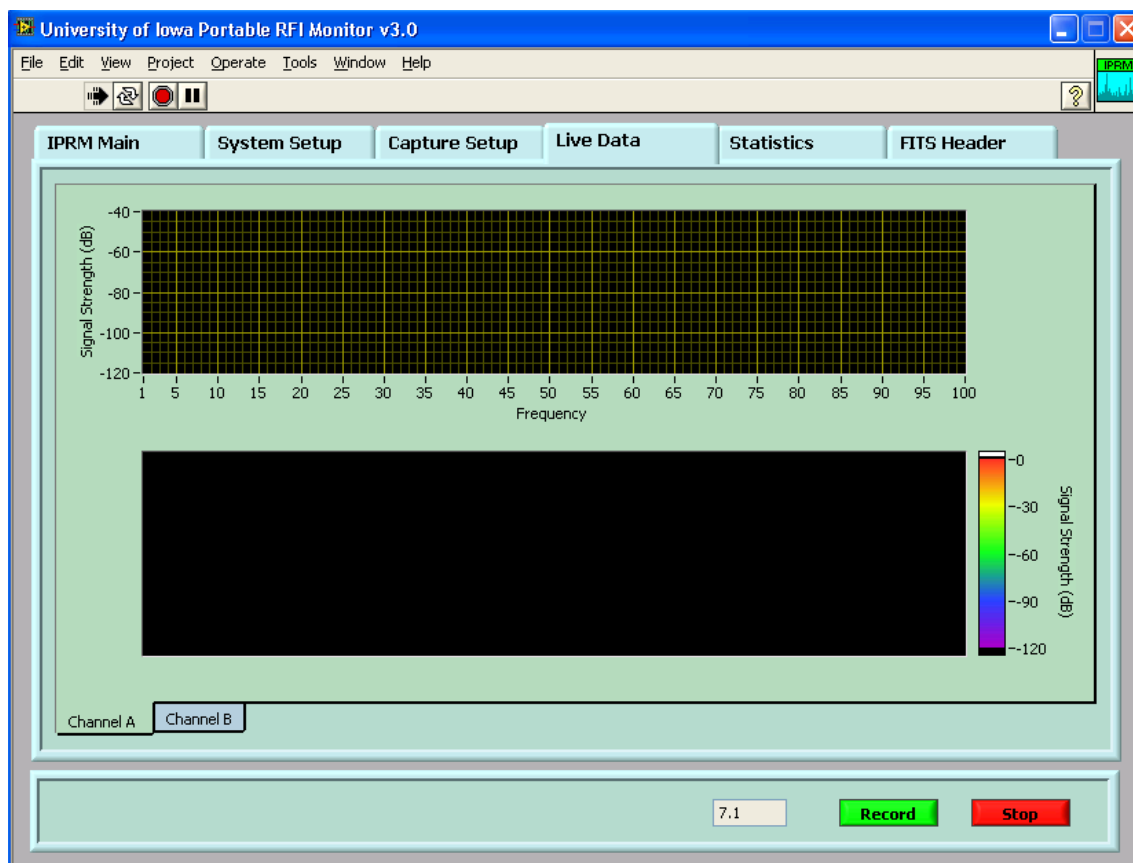


Figure 14: Live Data tab.

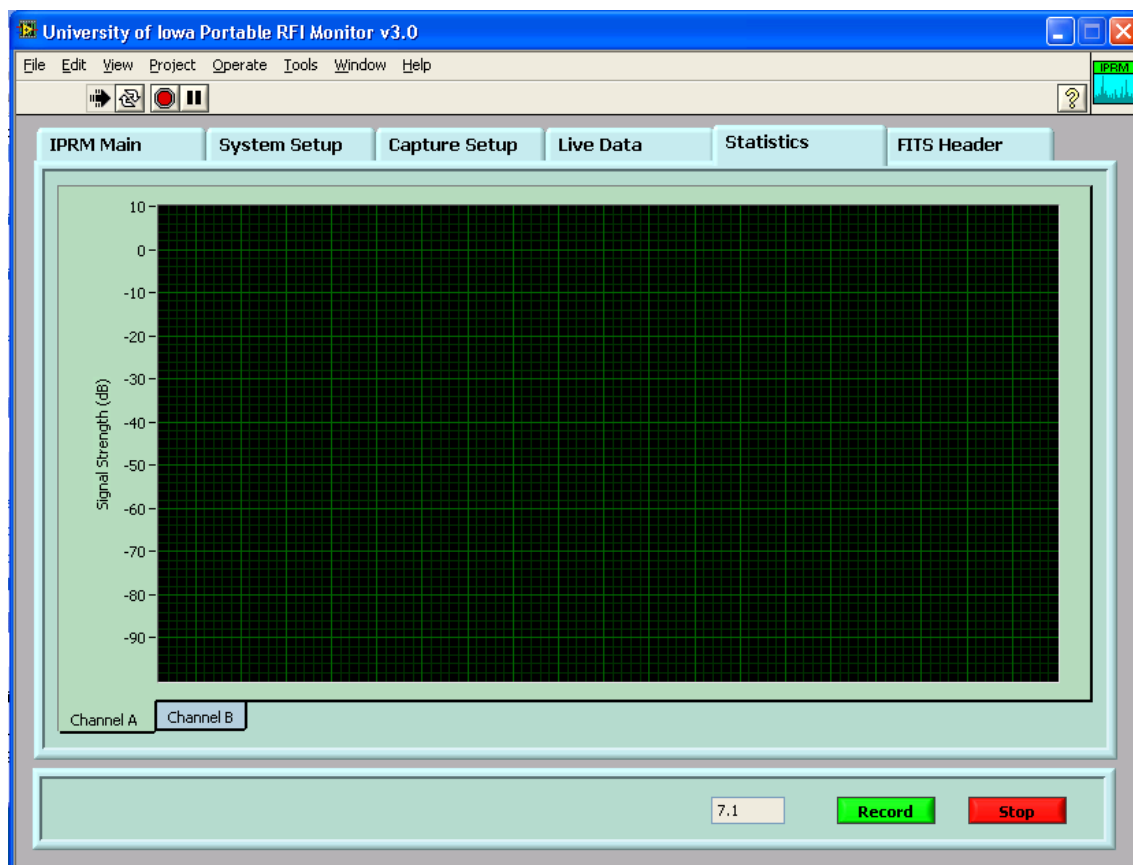


Figure 15: Statistics tab.



### 3.6 FITS Header

On the FITS Header tab, shown in Fig. 16, most of the information is shown that is going to be written in the FITS header of the output files. This is just to check that all values entered are correct.

The Values Listed Below will be Saved in the FITS Header and are for Display Only. \* (N) denotes Channel A or Channel B header

<b>DATE-OBS</b> 2008-07-01T18:02:45	<b>NLAT</b> 107:00:00	<b>RBW (A)</b> 100000	<b>BZERO (A)</b> 0	<b>RBW (B)</b> 100000	<b>BZERO (B)</b> 0
<b>JD</b> 2454649.25191553	<b>WLON</b> 34:00:00	<b>EXP (A)</b> 7.0833	<b>CDELTA1 (A)</b> 0.1	<b>EXP (B)</b> 0	<b>CDELTA1 (B)</b> 0.1
<b>LST</b> 10.4564	<b>DUTYCYCL</b> 1	<b>GAIN (A)</b> 0	<b>CRPIX1 (A)</b> 0	<b>GAIN (B)</b> 0	<b>CRPIX1 (B)</b> 0
<b>UTC</b> 18.046	<b>COMMENTS</b> None	<b>BALUN (A)</b> 0	<b>CRVAL1 (A)</b> 10	<b>BALUN (B)</b> 0	<b>CRVAL1 (B)</b> 0
<b>OBJECT</b> LWDA		<b>ATT (A)</b> 0	<b>CTYPE1 (A)</b> FREQ	<b>ATT (B)</b> 0	<b>CTYPE1 (B)</b> FREQ
<b>OBSERVER</b> RFIMon		<b>ATTEN (A)</b> Antenna A		<b>ATTEN (B)</b> Antenna B	
<b>INSTRUME</b> Advantest R3131A		<b>BUNIT (A)</b> dB		<b>BUNIT (B)</b> dB	
<b>SESSION</b> LW/A0929475		<b>BSCALE (A)</b> 0.00762939		<b>BSCALE (B)</b> 0.00762939	

7.1 Record Stop

Figure 16: Fits Header tab.

## 4 Field Setup and Operation

The following gives a step by step instructions on how the system is commonly deployed in the field for strong RFI survey purposes.

### 4.1 Field Setup

First thing on arriving at the site the truck needs to roll onto the stand for the pole the discone antenna is going to be attached to. To give a rough overview what needs to be done for setting up the system, here are the basic steps that should be followed:

1. Take the pull off the suspension of the pulling vehicle by extending the stand of the trailer.
2. Assemble the Big Blade antenna close to the spot it is going to stay at.
3. Assemble the Discone antenna and install it on the extendable pole.
4. Run cables to each of the antennas and attach to the pass-through connectors, do not attach on the antenna side yet, that can be done later.
5. Take out the power generator and place it in front of the truck.
6. Ground the generator with the grounding stick and jumper cables.
7. Run the power cord from the generator to the trailer.
8. Setup Laptop inside and check the installed equipment in the rack for functionality.
9. Power on UPS and generator.

After these steps have been followed the whole setup should look similar to the one shown in Fig. 17. The tools needed to perform these steps: hammer, Phillips screwdriver, lug wrench, and an Allen wrench. These can all be found in the box labeled “Tools” together with all the screws and parts that are needed.

Extend the stand of the trailer by using the winch, thus taking of the pull on the suspension of the truck. Then open up the trailer take out all parts of the Big Blade antenna. Place the antenna about 15-20 m away from the trailer and the road. Make sure it is also at least 10 m away from a fence or other metal structure and at least 25-50 m away from any low voltage power line. Orient the blades in the rough directions corresponding to the labels of the blades. One can use the GPS electronic compass for help on the orientation. Then lay out the support beams according to their labeling numbers going from 1 to 16. The numbers should go one time around in order. Then get the faceplate and attach the first blade to it using the short screws. While one person is holding the faceplate and the first blade up (the blade should have roughly 45 degree angle to the ground), the other one attaches the beams/PVC pipe joint to the base of the blade through the holes and screws. Then the next blade follows first adding it to the faceplate and then the PVC pipes to the base going around until the whole antenna is assembled.

Next thing is the discone antenna. It is stored in its original packaging. Look for the central piece, it is obvious once you found it. Then attach the thick long hollow beams that go off at an angle using the right Allen wrench. Now attach the short metal rods that go off perpendicular to the center piece, they just screw in. Screw on the top part. Now the antenna can be placed on top



Figure 17: Typical field setup of the LPRM with the RFI trailer, generator in front of the truck, discone antenna on the pole, and the Big Blade antenna to the left.

of the extendable post that fits into the base the truck has rolled onto with one tire. Place it there and continue with the setup.

Now unroll cables to each of the two antennas, only attach the trailer side to the pass throughs. Start unrolling at the antenna side with the SMA connector, then left over cable can be kept rolled up and be placed on top of the trailer. The cable is LMR240, thus a little sturdy, be careful to put no bends into it. Three cable pass-throughs are located on the top left of the side door of the trailer. They are labeled with colored tape red or blue, corresponding to the color on your roll of cable. Blue usually goes to the Big Blade antenna and red to the discone antenna, thus the wiring inside the trailer does not need to be changed all the time.

Next unhook the power generator in the trailer and roll it out the back and then to the front of the truck. If it needs to be refueled do so now. Then drive one of the grounding sticks of the trailer into the ground and attach the jumper cables to it and the generator. Get the power cable, attach one end to the power outlet to the outside of the trailer (front wedge close to the door) on the generator side do not attach the power cable yet.

Setup all the equipment in the trailer. The Laptop should be setup on the table, the power cord attached and two USB cable attached to it connecting the Spectrum Analyzer and the Receiver Box. A cable each should run from the pass-throughs inside to the inputs of receiver box. The cable that goes to the Big Blade antenna has a Bias-T attached to it before it reaches the receiver box.

Turn on the generator by opening the fuel valve, pulling out the choke and start it with the recoil winch, do not forget to put the power switch into the 'on' position. Once it is running stable push the choke slider back into its normal position. Now the power is selected with the switch on the control panel to 130 V, then the power breaker is turned on and the panel should show the right voltage. Now the power cord to the trailer can be attached to the power outlet at the control panel. Back at the trailer turn on the UPS and wait until after the self check to go in Line mode. Then the rest of the equipment can be turned on. Do not forget to calibrate the spectrum analyzer as described in section 2.4. Turn on the power supply, for powering the receiver box the power supply should have 15 V set and draw a few milli amps.

## 4.2 Calibration with Noise Source

At this point do not forget to start filling out the log sheet. Fill in all the necessary information about the site, weather conditions and other things that are unique and noteworthy. From now on keep track of things you are doing, like every step of the calibration procedure, etc. and timestamp it with a remark on the log sheet.

Before we start the data collection we need to calibrate and check the whole system. Start the Labview recording software on the Laptop. Attach the Noise Source directly to the input of the spectrum analyzer and record at least 20 spectra for each of the observed frequency ranges, 1-100 MHz and 100-1000 MHz. Then attach the cable of the Big Blade antenna to the active balun on the face plate using the torque wrench. Then attach a 50 Ohm load to one of the Inputs of the two Inputs of the Balun that are going to be used. The Noise Source is attached to the other Input of the Balun. Check inside the trailer that the balun draws the right amount of current (0.32 mA at about 9 V). Then take the same number of spectra as before just for the lower frequency range.

Detach the Noise Source and the 50 Ohm load from the antenna and attach pig tails to the blades connecting to the inputs of the Balun. Check the shape of the spectrum on the spectrum analyzer and identify the strongest peak. The reference level should be set to about 5-10 dB above the maximum peak for best accuracy. If the maximum level exceeds -10 dB attenuation should be introduced between the Input of the Balun and the blades using Mini Circuits attenuators.

Now attach the Noise Source to the end of the cable to the discone antenna and record a spectrum for the high frequency range. After this detach the Noise Source, attach the cable to the output of the Discone antenna and extend the pole the discone antenna is mounted to. If winds are high or expected to pick up make sure the connection at the discone antenna is tight and screw the cable feed shaft to the center piece of the discone to make sure the cable does not get twisted.

## 4.3 Strong RFI Survey

We are ready to start recording the actual RFI spectra. Modify the settings of the software for longer runs, saving about 50-150 spectra per file, depending on the length of the run (3 hours or 24 hours). Make sure the switching between channels works properly and the recorded spectra look as expected.

For 24 hour runs at least once during the run the generator needs to be refueled. Write down in the log when process has started, the system will continue running on battery power through the UPS for a limited time, but interference caused by turning off/on the generator could be identified. Then turn-off the generator by bringing the circuit breaker into off position, deselect the voltage level and turn-off the power switch. Refuel the generator. Then make sure no gasoline spilled. Put the power switch back into the “on” position, pull out the choke if necessary and pull the recoil. The generator should be back up. Select the power level, turn on the circuit breaker.

Sometimes strong winds shake connectors loose, if you see outages in the recorded live spectra go and check for loose connectors. If a thunderstorm looms use common sense, a lightning detector is provided with the equipment. If a storm gets too close stop recording and detach every cable that attaches to the inside and seek shelter in the trailer until the storm passes.

## 4.4 Packing Up

Packing up is pretty much a reversal of setting up everything. But there are a few things to watch for that might keep things easier for the next time the system is setup.

Once data taking is done, copy all the files off the laptop onto a USB stick for backup. detach the laptop and put it back into its case. Turn off all the equipment and the UPS. Then turn-off the generator. Pull out the grounding stick and the jumper cable. The generator is the first piece that has to be moved back into the trailer, because it needs to be put as close as possible to the truck thus in the wedge of the trailer. Safely secure the generator from moving around in the trailer, by using several bungee cords from moving around in the trailer. The equipment rack can help with that. Then disassemble the discone antenna. Make sure that the headless screws of the center piece are screwed in back tight, if they are loose or not screwed in at all after the beams have been removed, they will fall out and get lost making it impossible to assemble it the next time in the field without getting new parts. Then roll up all the cables and store them in the trailer. Finally disassemble the Big Blade antenna by reversing the process used assembling it. There is no good way to store the blades in the trailer. Usually two blades can slide under the generator and two fit on the side of the door between generator and door. The PVC pipes just slide under the generator and also fit to the side between two blades.

Before pulling out do not forget to pull up the stand of the trailer and do not forget to take the stand for the pole of the discone antenna. Make sure all the trailer is locked once everything is packed-up.